


Installation Instructions for Dummy Key in Knob Lockset

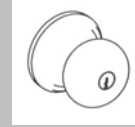

1. Unpack the lock, loosen the set screws at the bottom of each knob, remove Knobs from Inner Housing and unthread the Rosettes from Inner Housings.
2. Install inner housings onto surface of door orienting the notch on the housing to the bottom. The two wood screws should be located at the top and bottom.
3. Thread the Rosettes into the Inner Housings and slip Knobs into Inner Housings. Tighten the set screws at the bottom of each Knob.

